
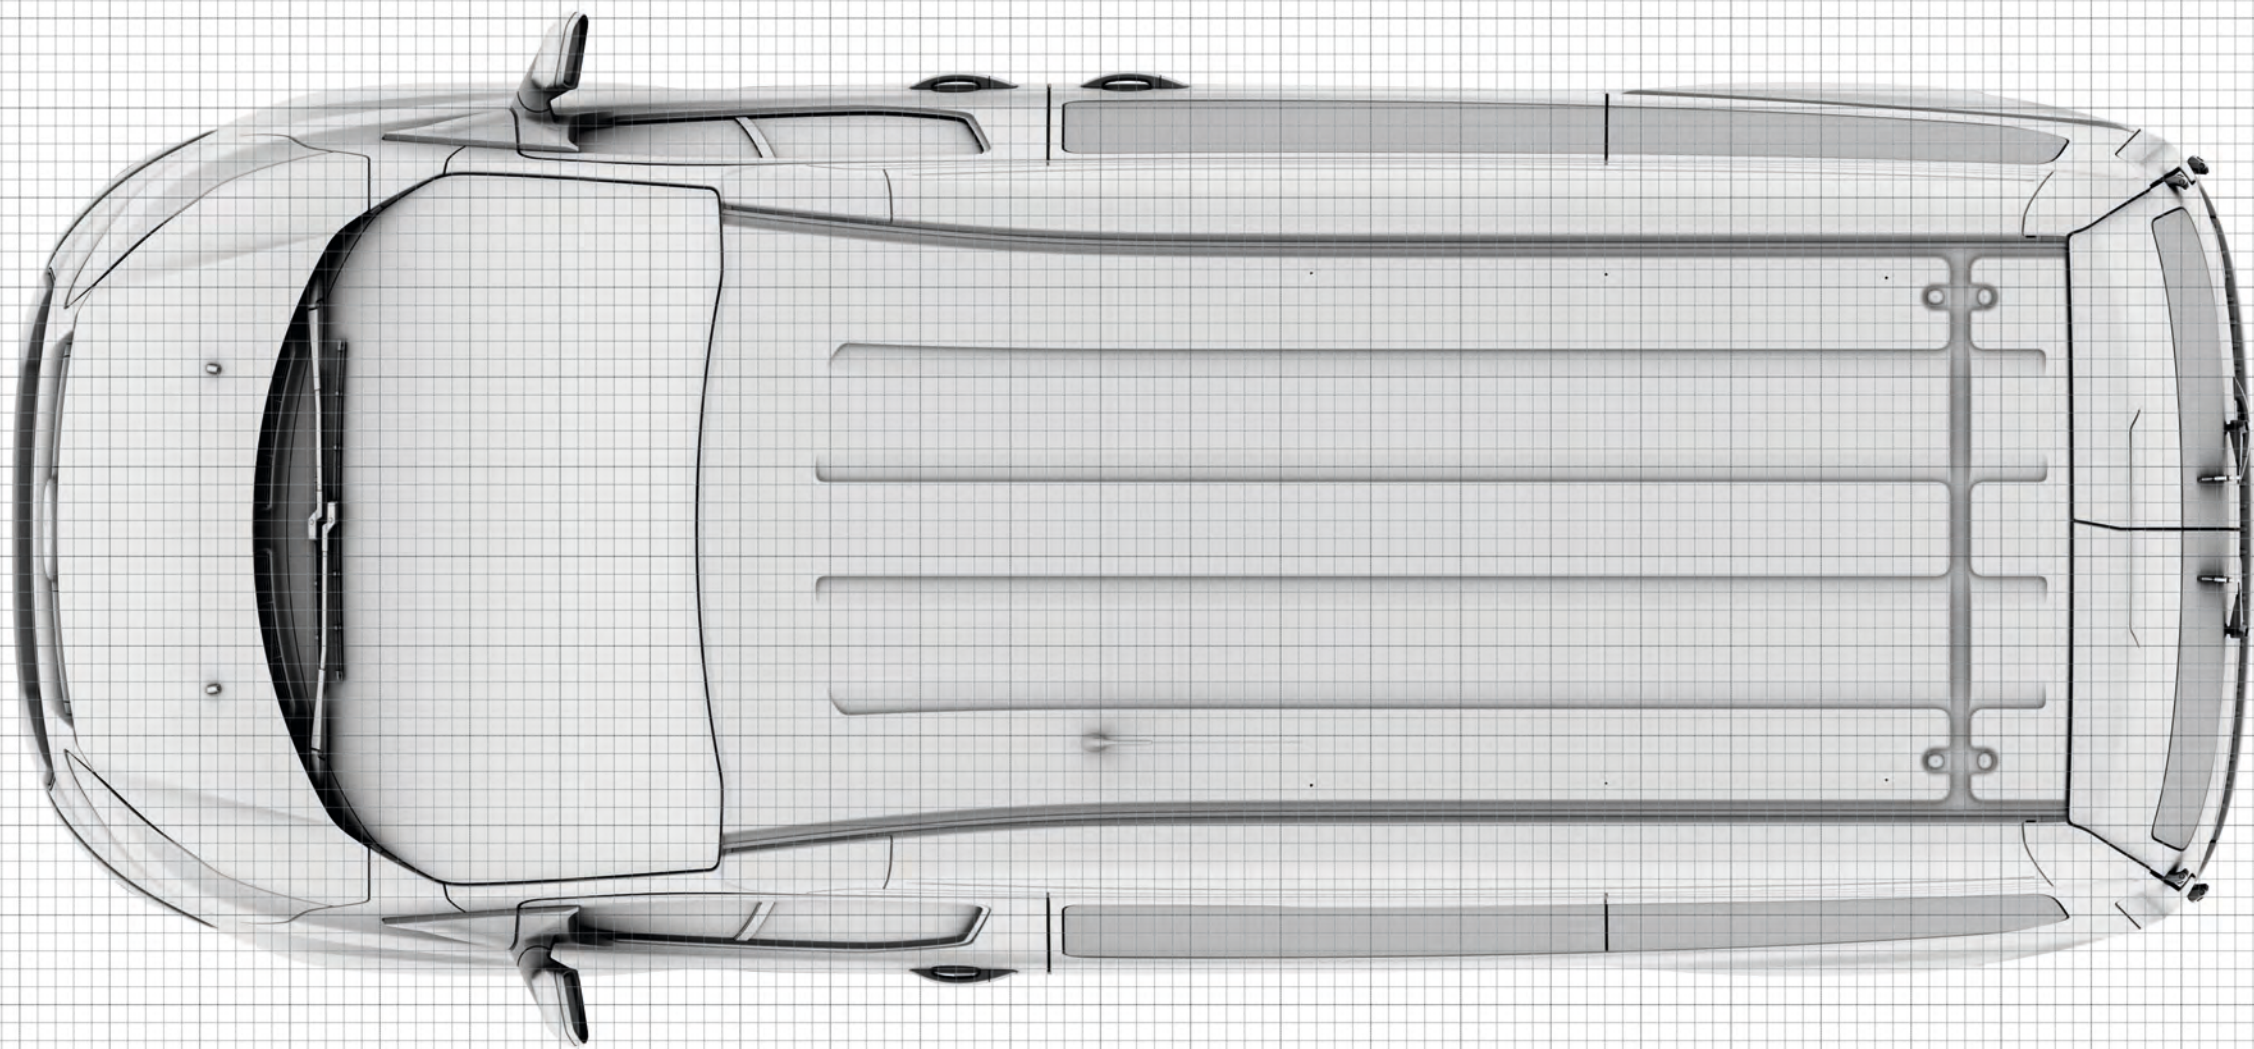




Transit Custom Kombi High Roof SWB

 = 200mm





Transit Custom Kombi High Roof SWB

 = 200mm

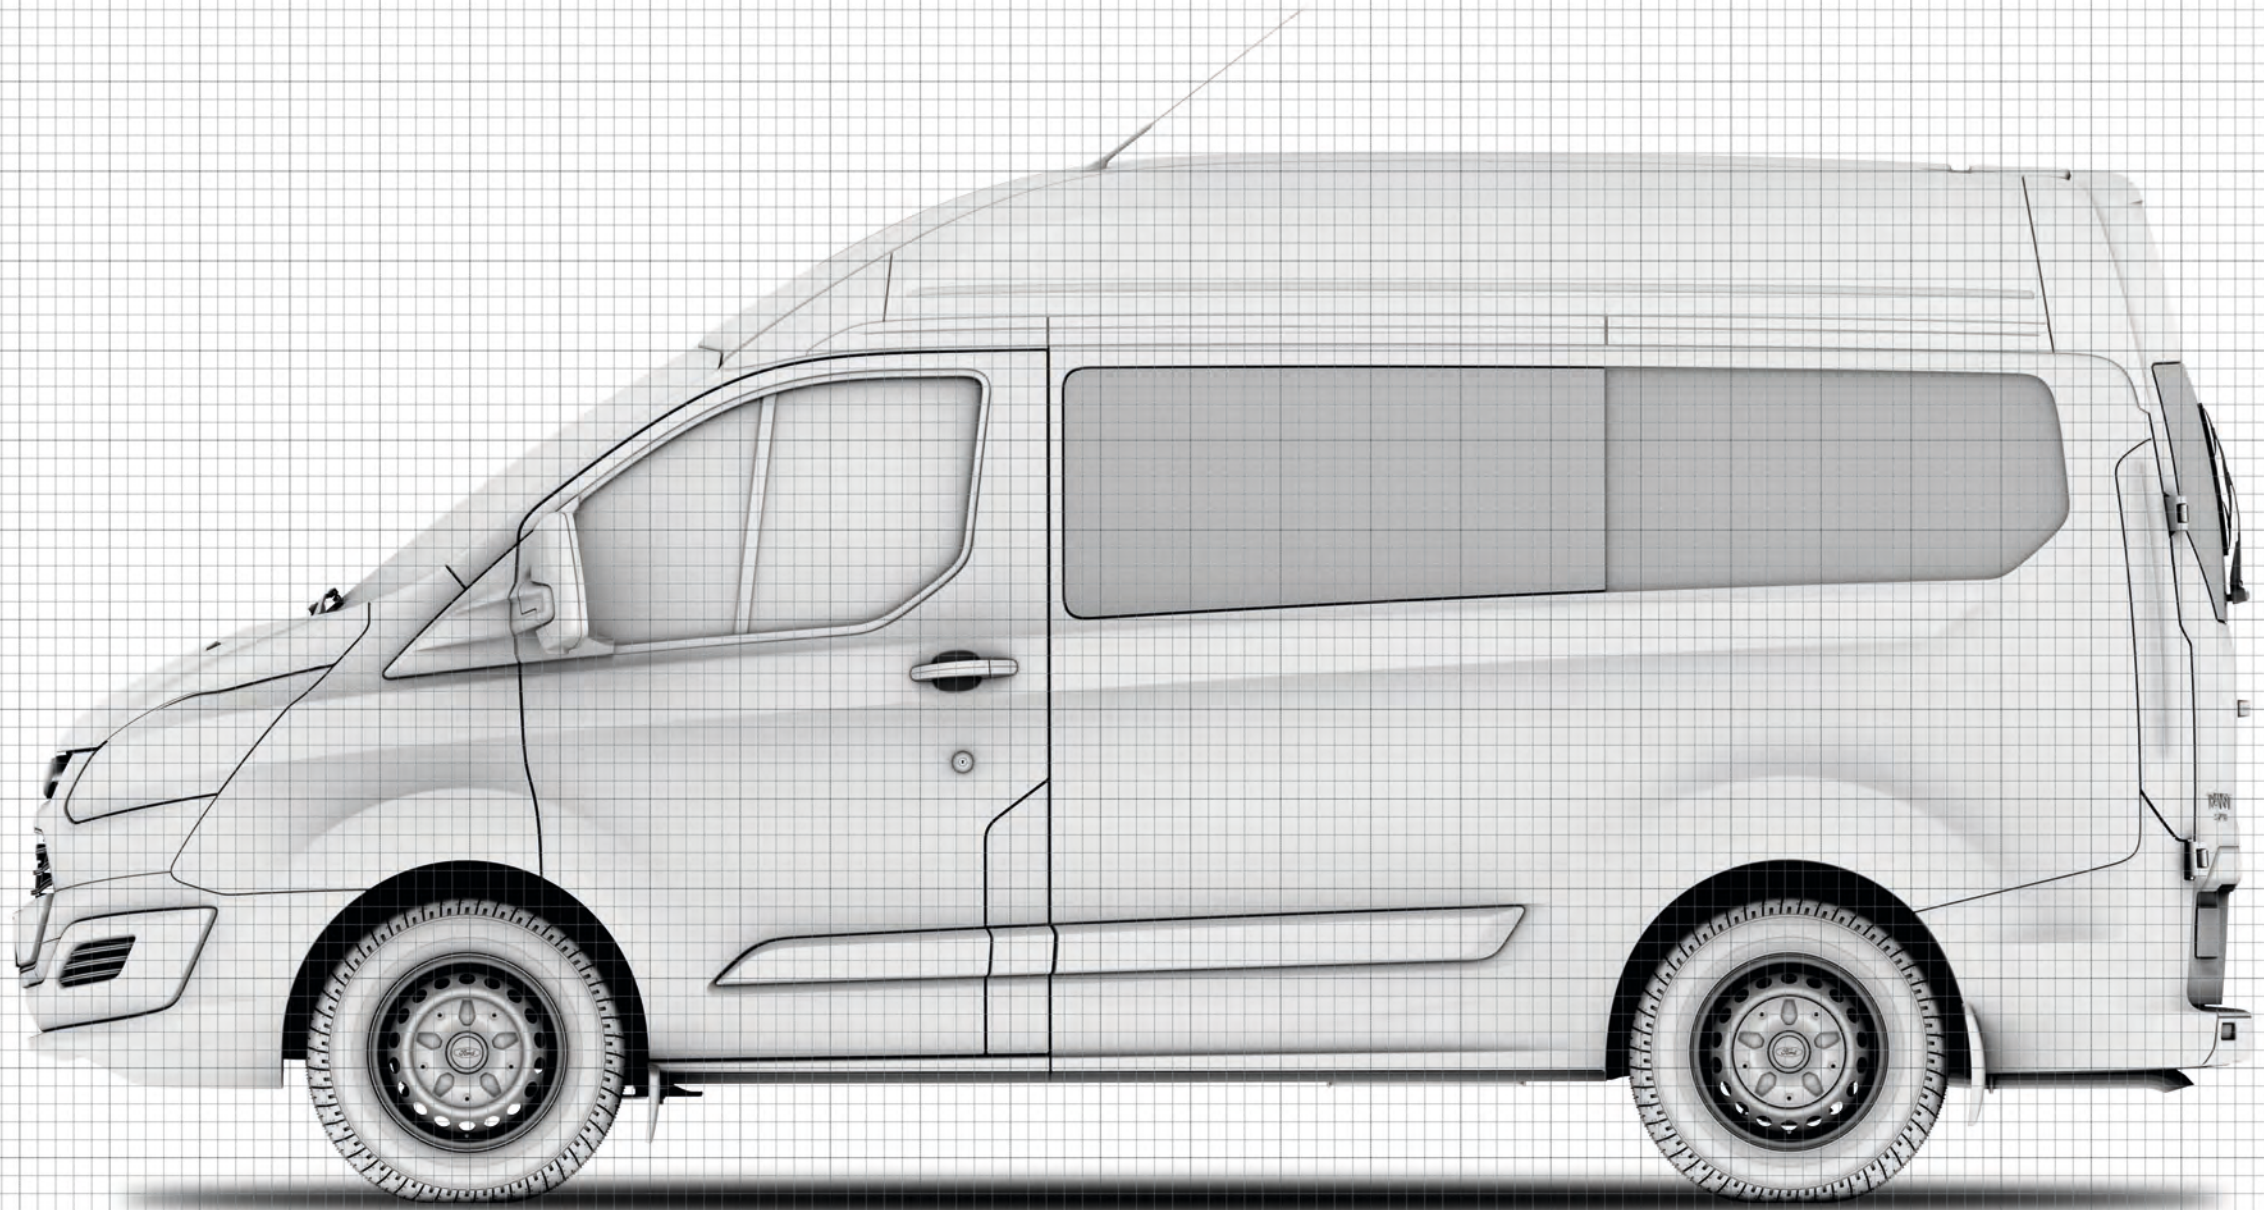



Transit Custom Kombi High Roof SWB

 = 200mm

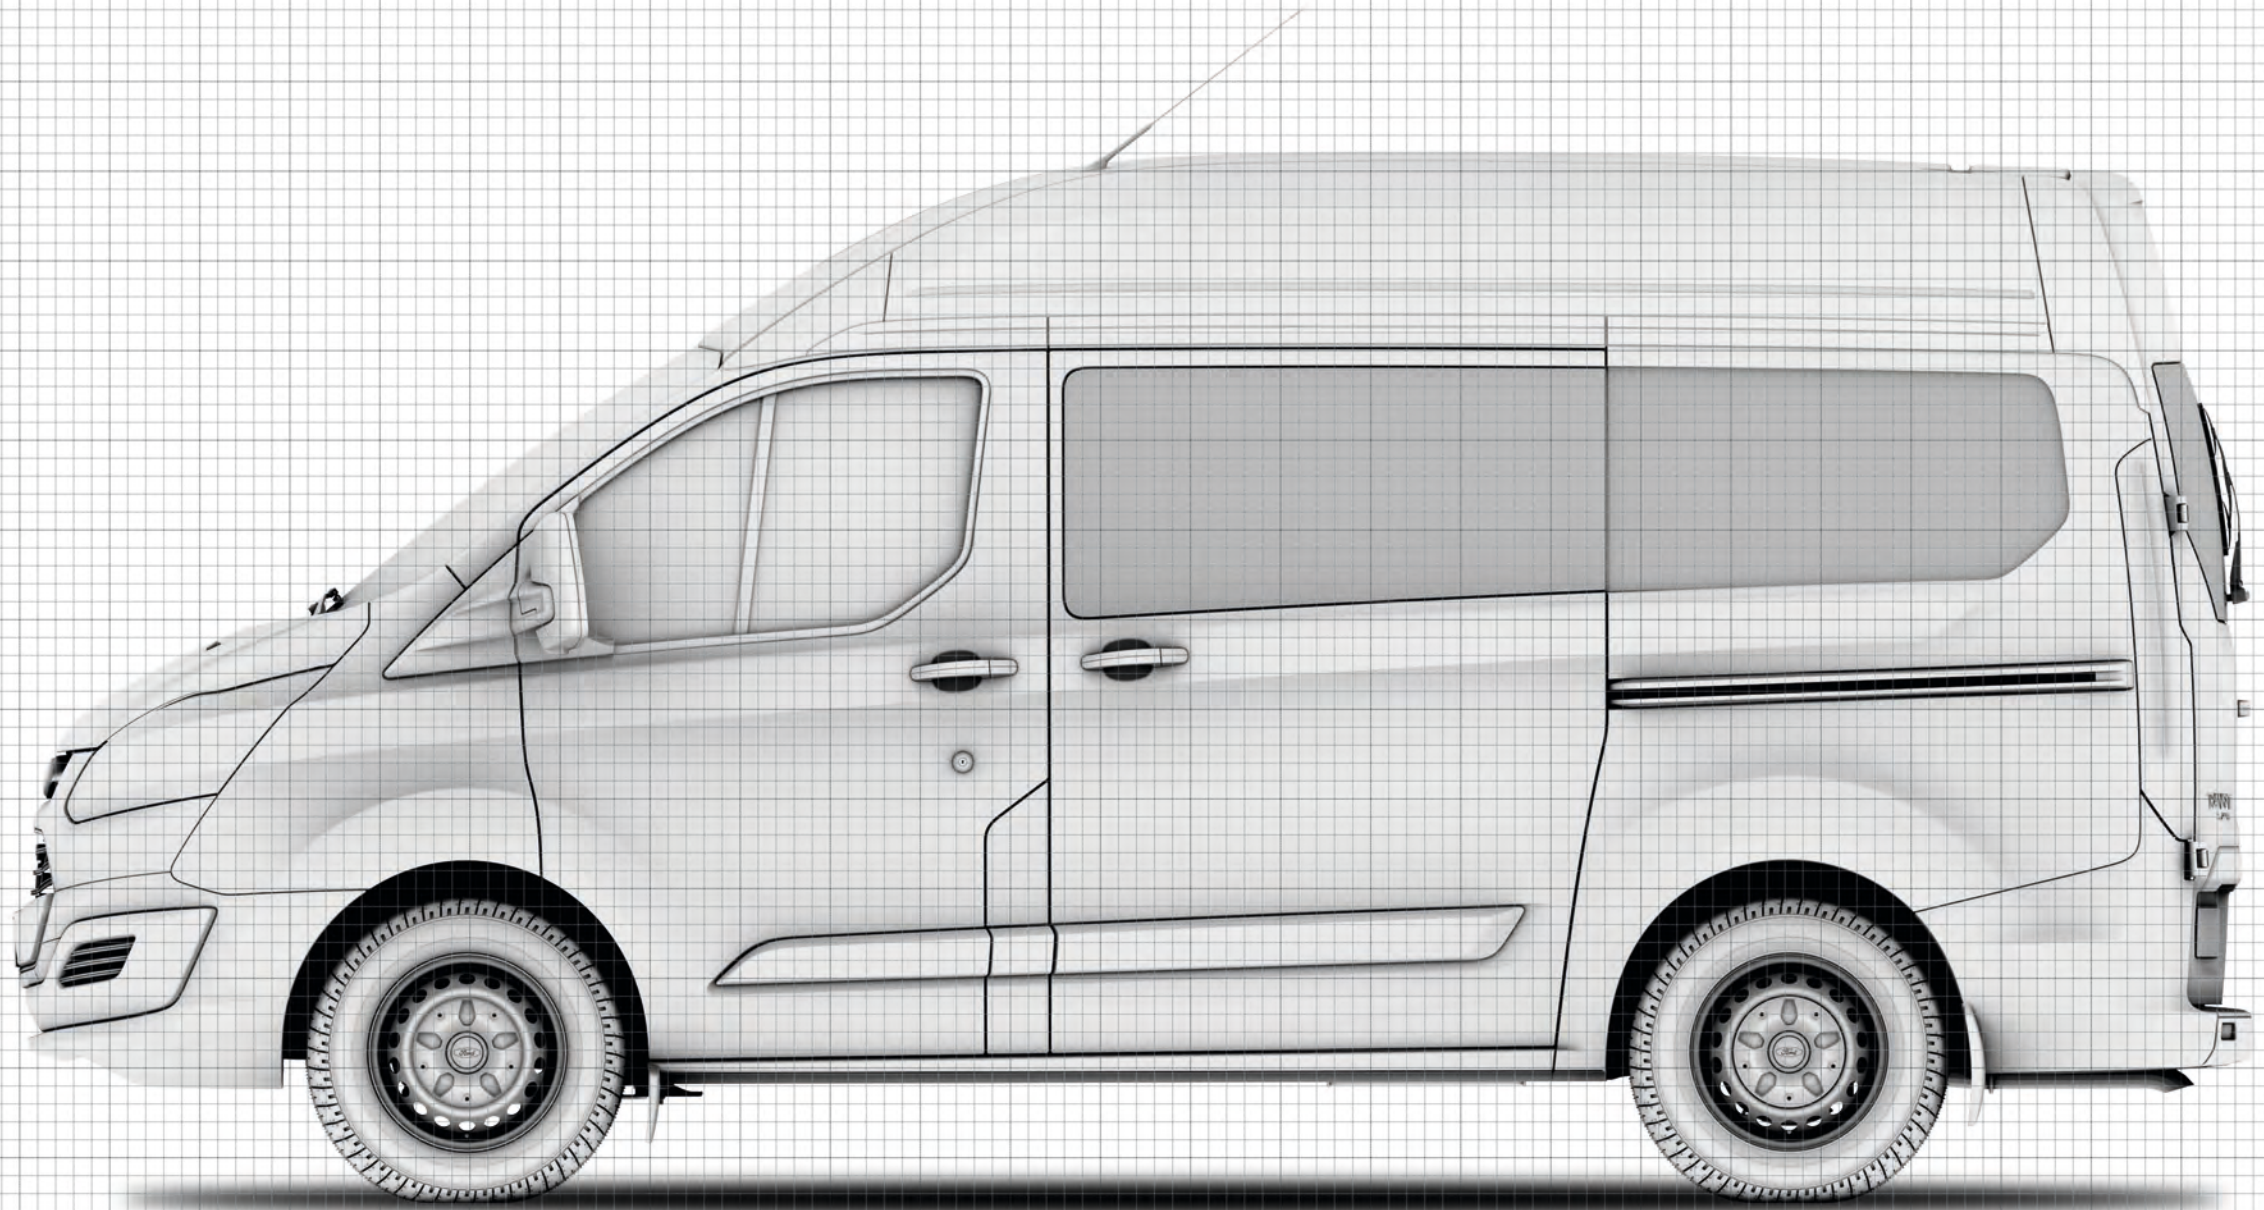



Transit Custom Kombi High Roof SWB

 = 200mm

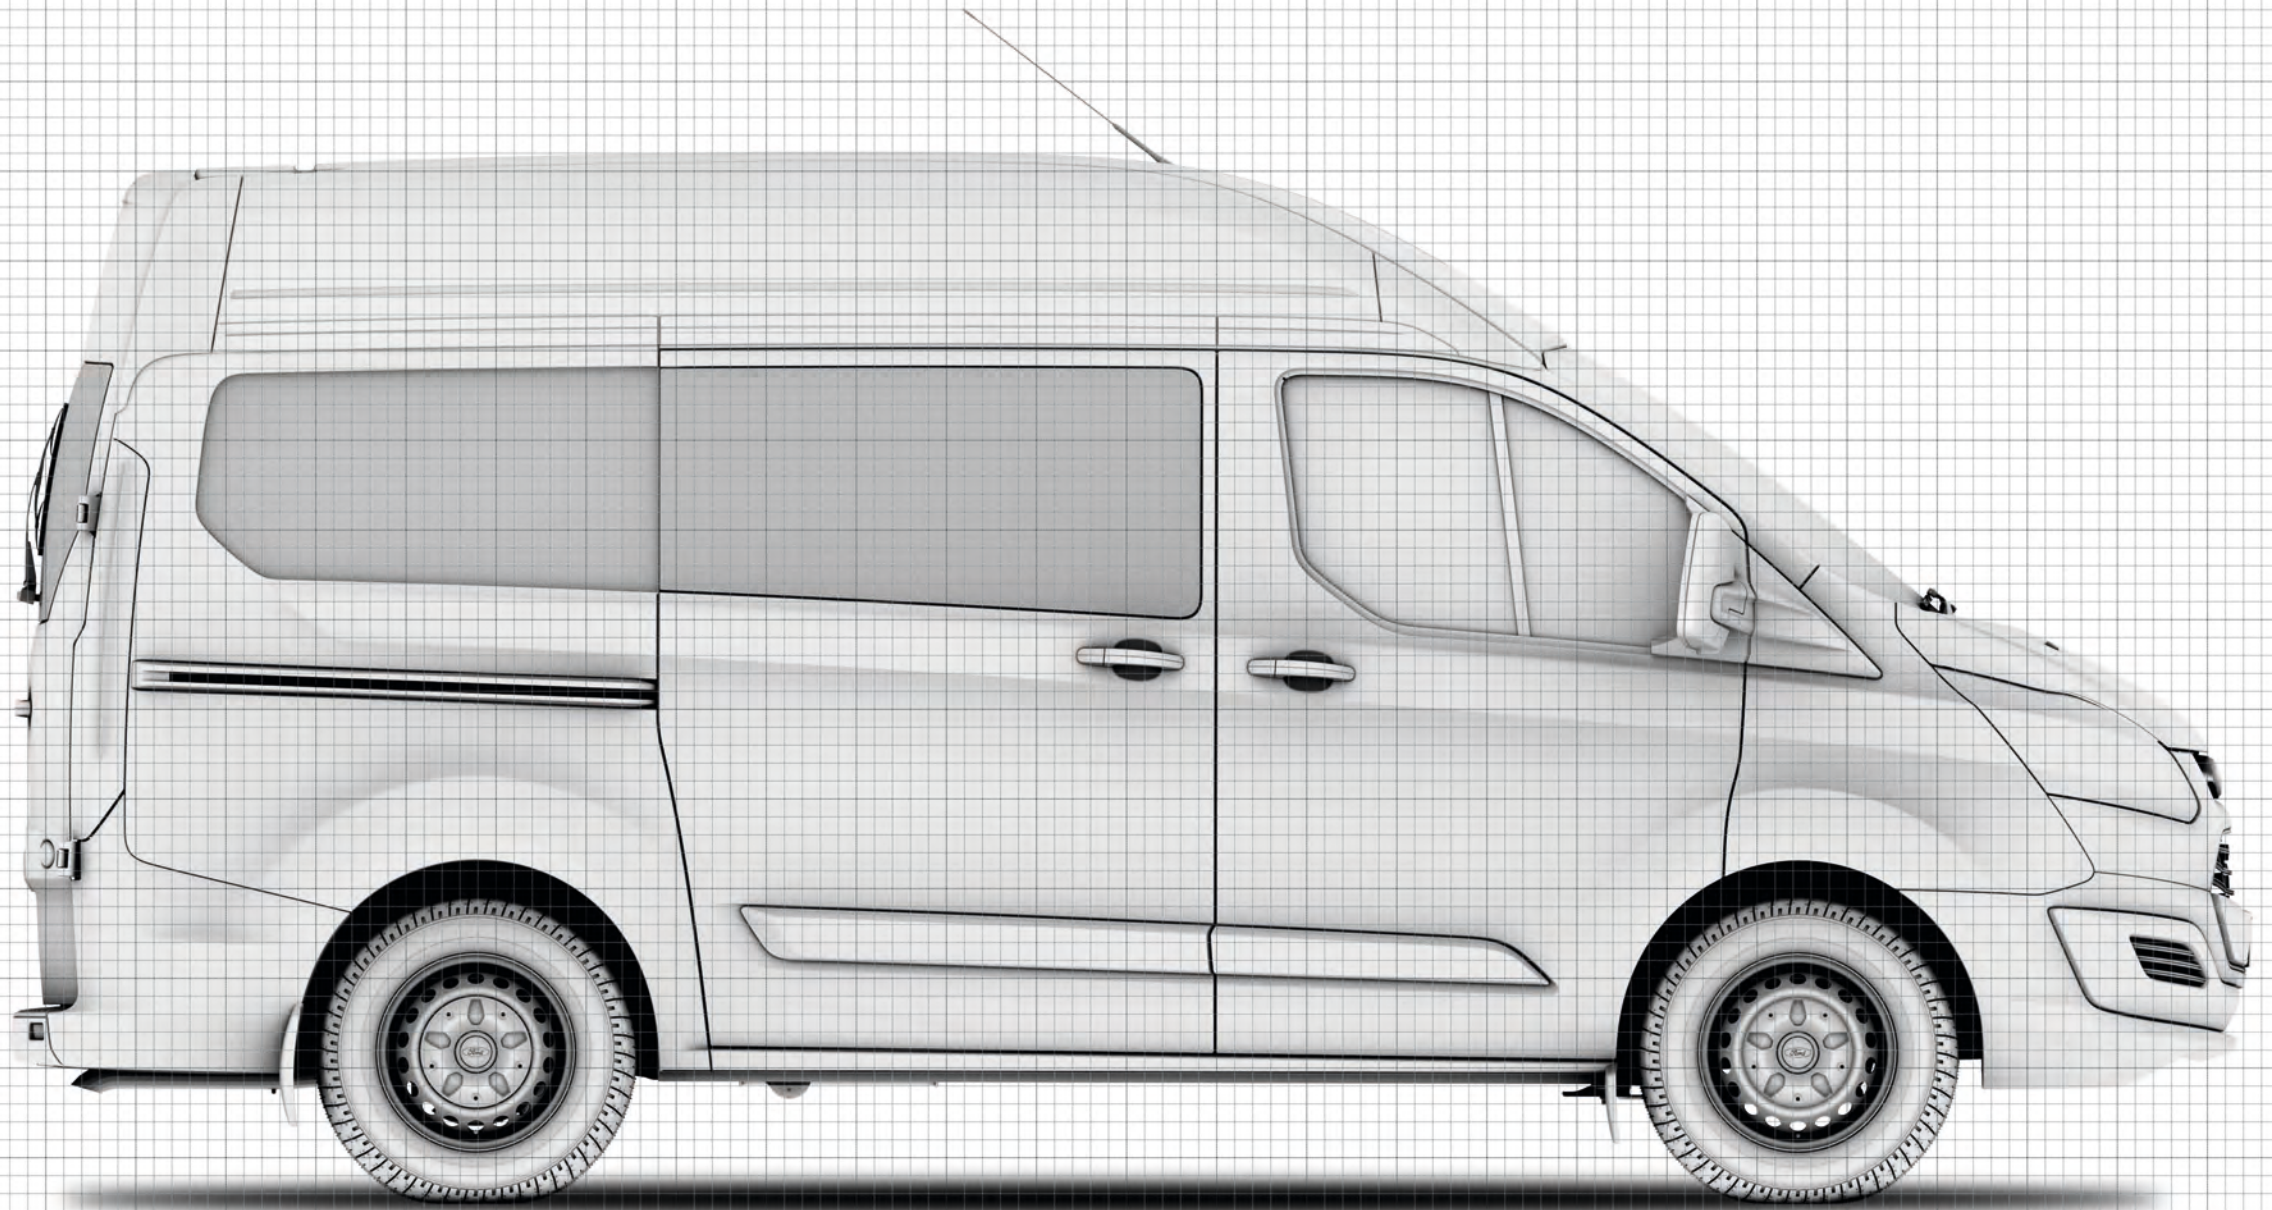

Transit Custom Kombi High Roof SWB

 = 200mm

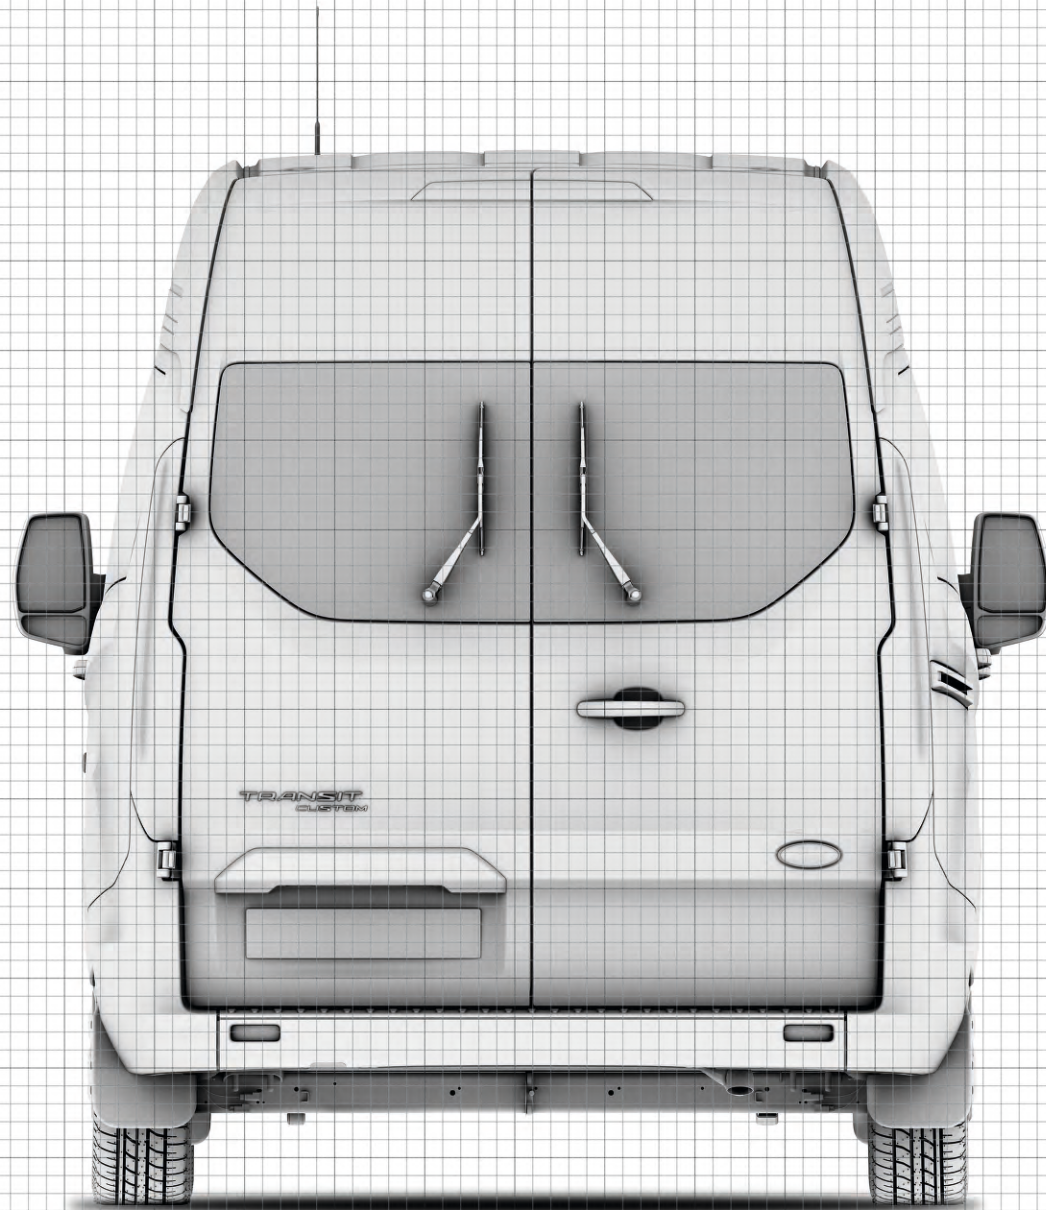

Transit Custom Kombi High Roof SWB

