

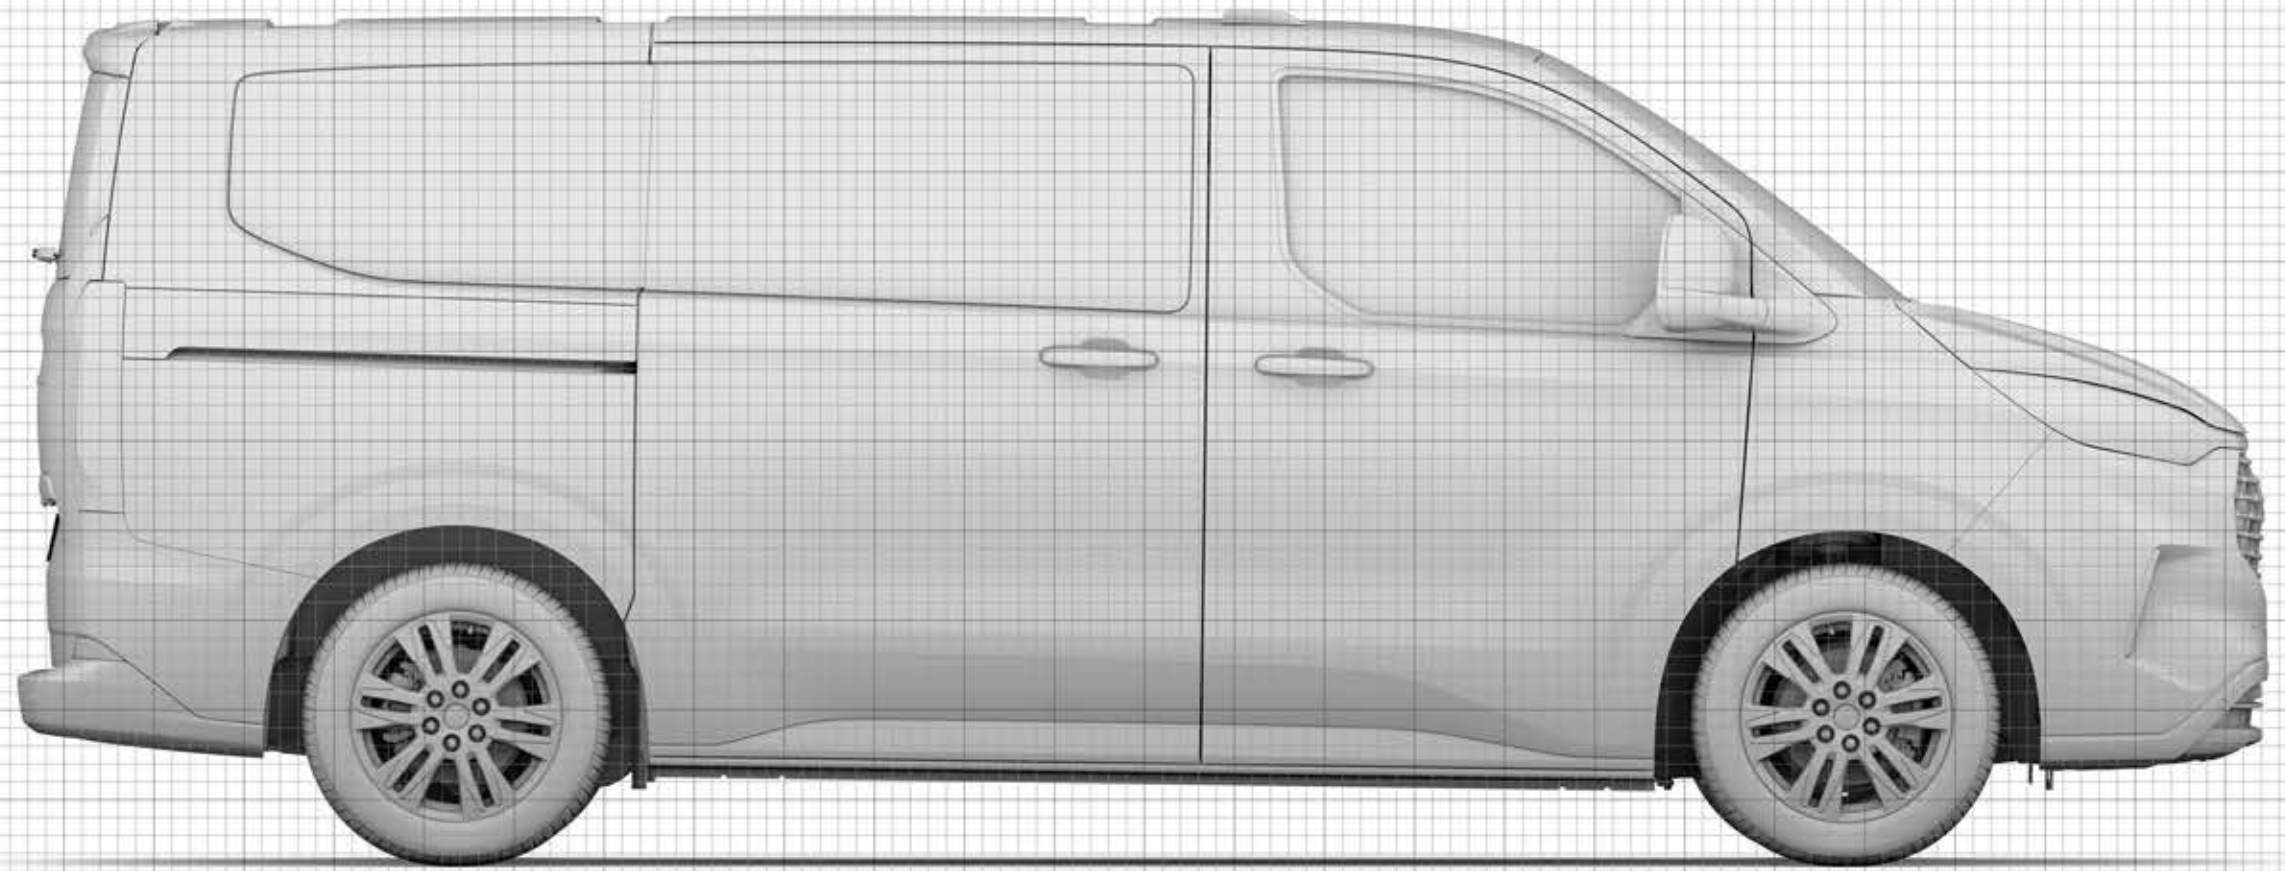



V710 Tourneo Custom L1 H1 - LHD Back Profile

=200mm





V710 Tourneo Custom L1 H1 - LHD Right Facing Side Profile

 =200mm

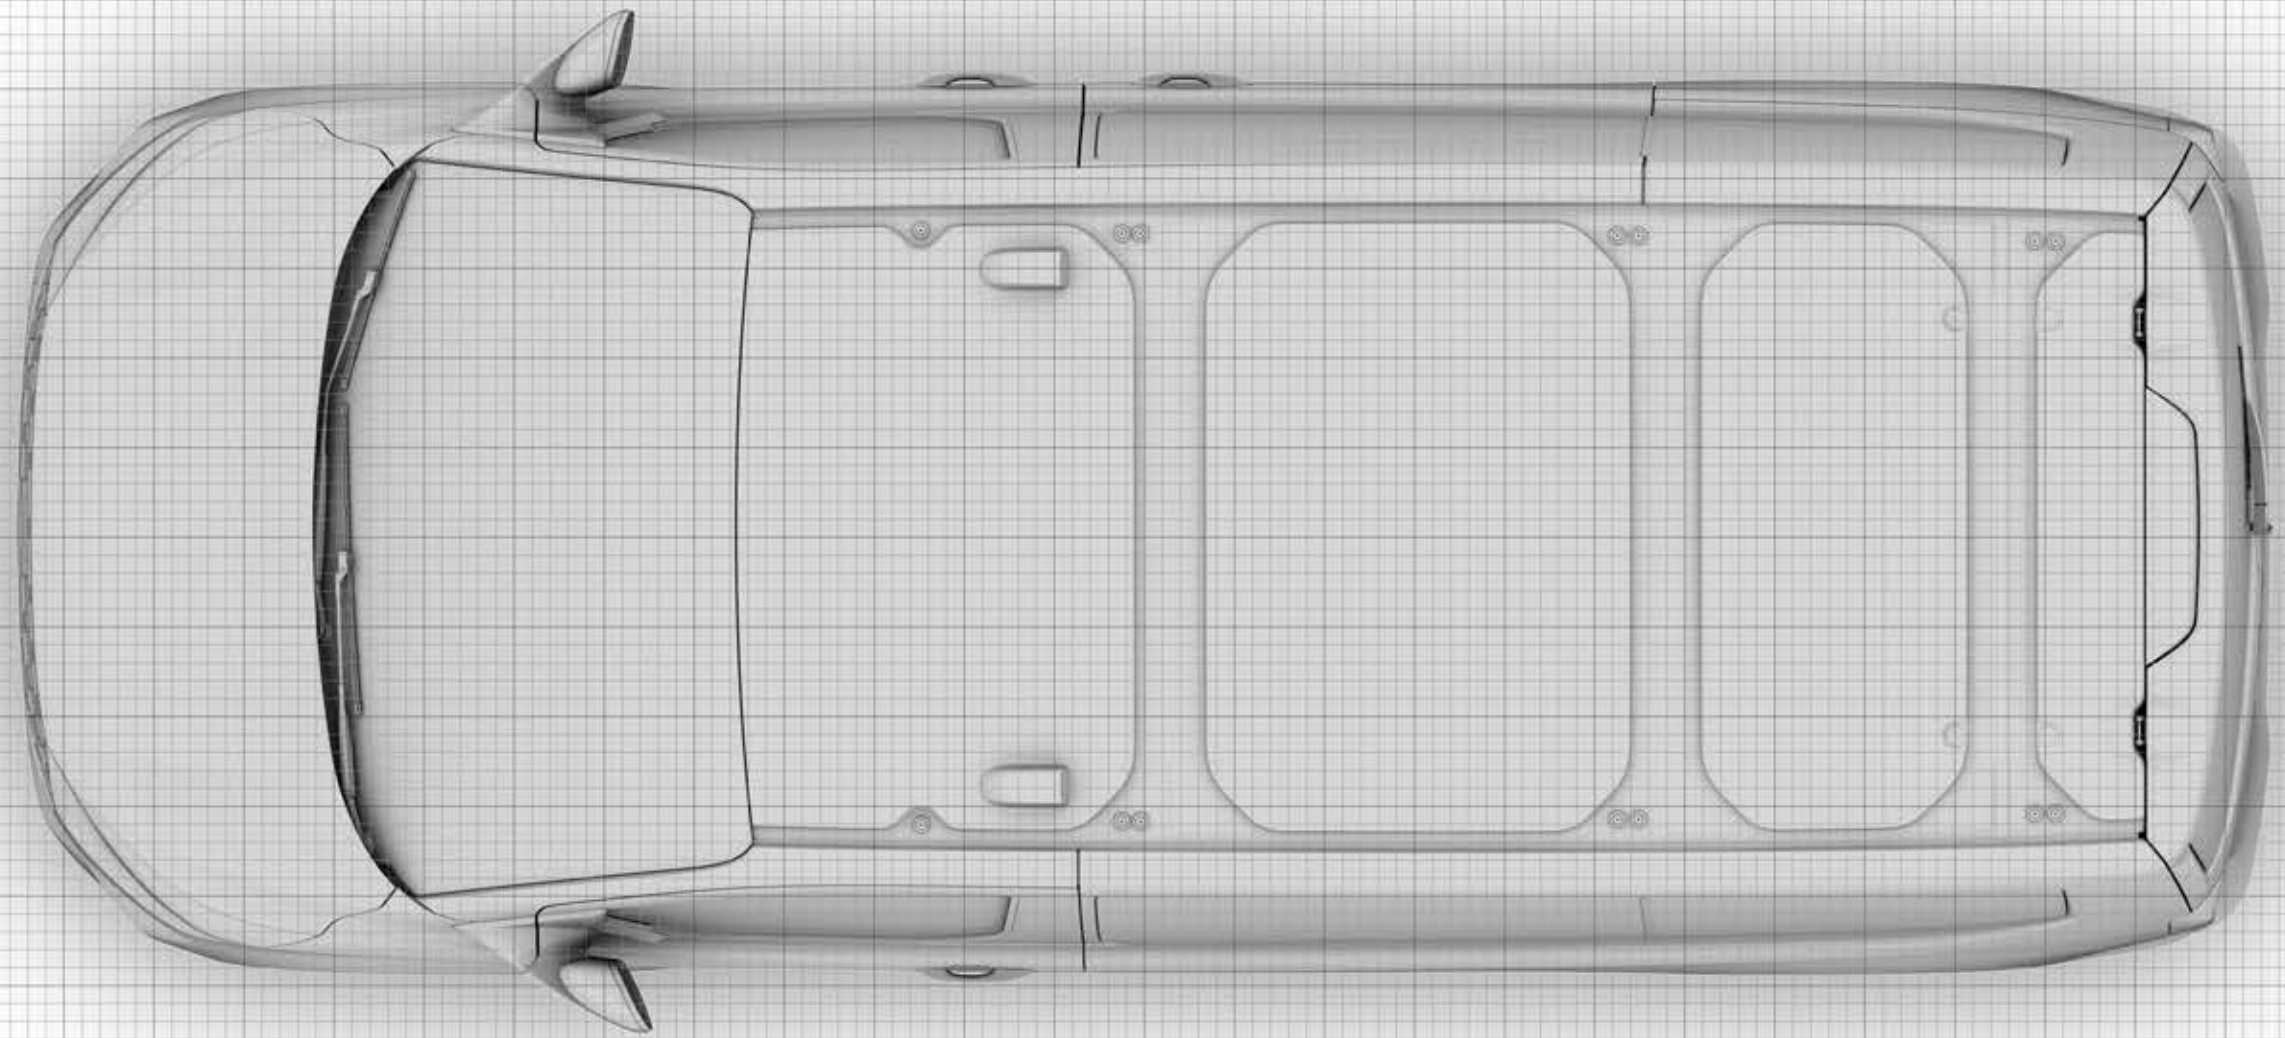



V710 Tourneo Custom L1 H1 - LHD Overhead Profile

 =200mm

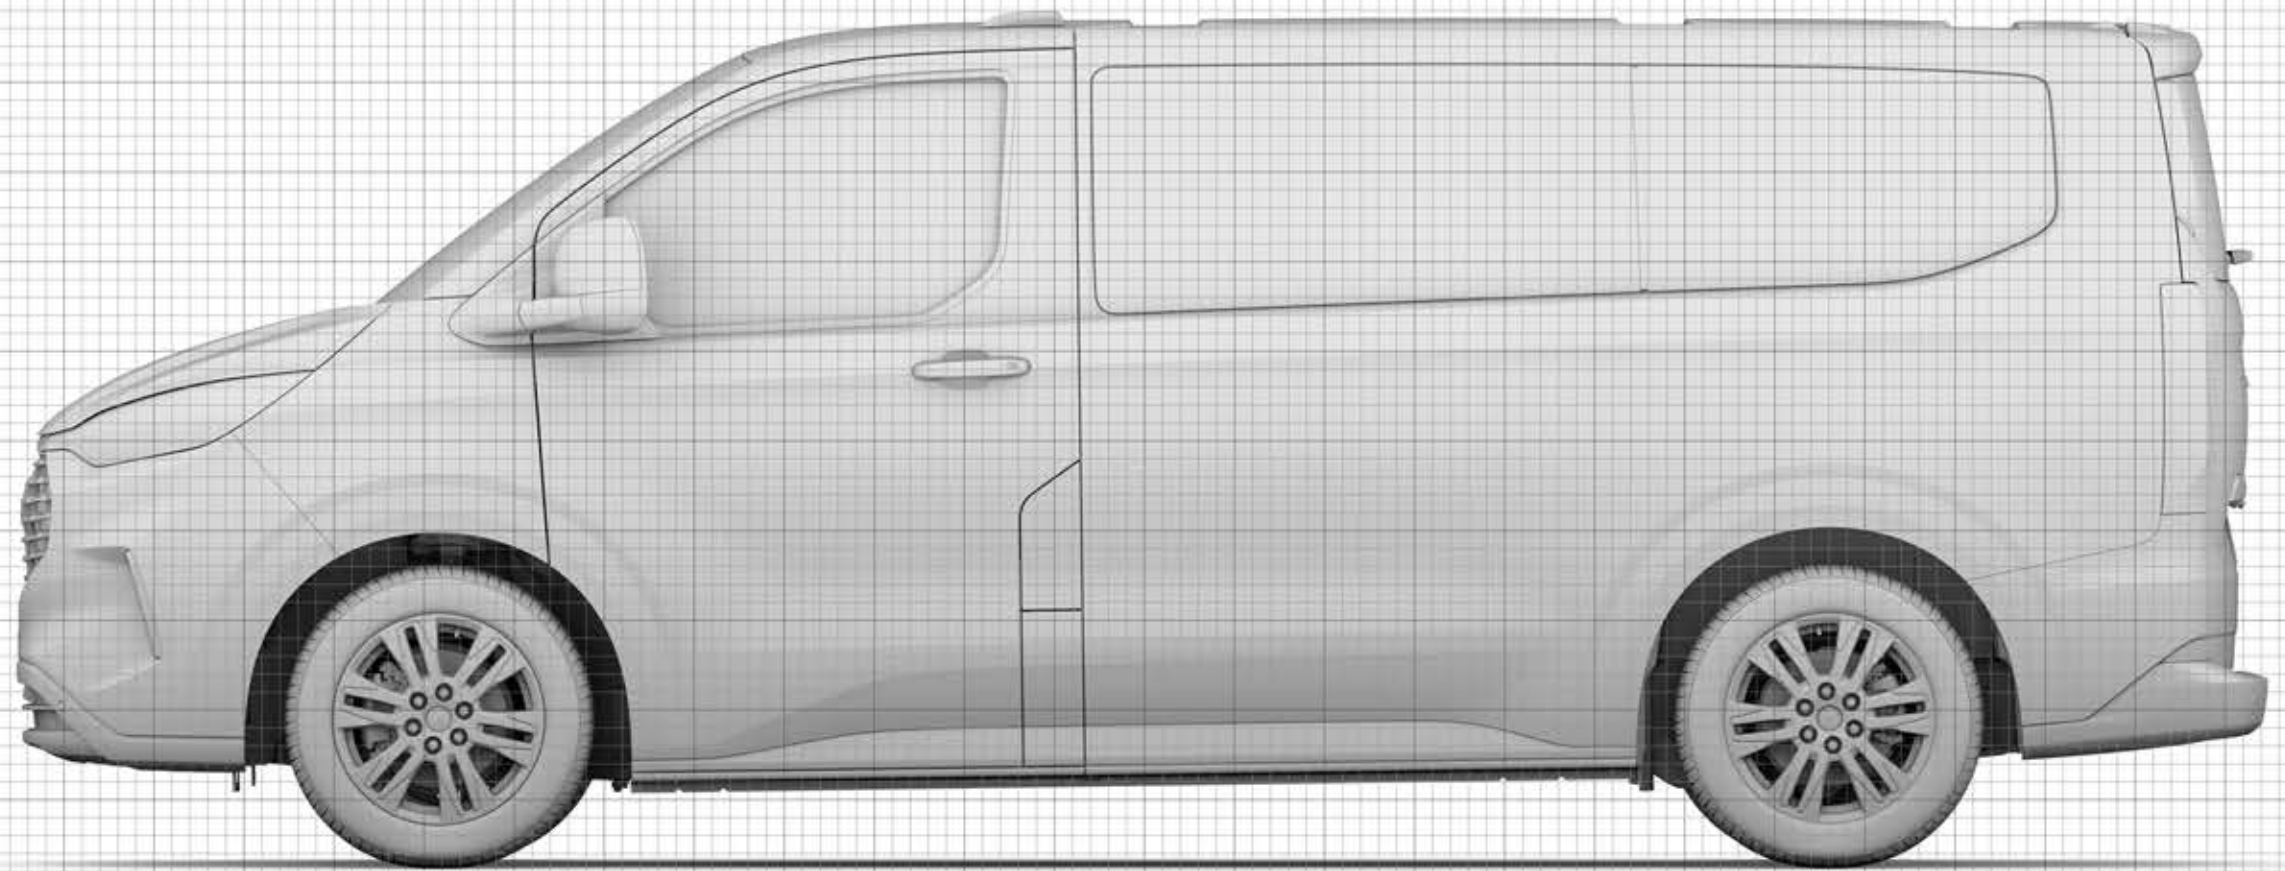


V710 Tourneo Custom L1 H1 - LHD Left Facing Side Profile

 =200mm

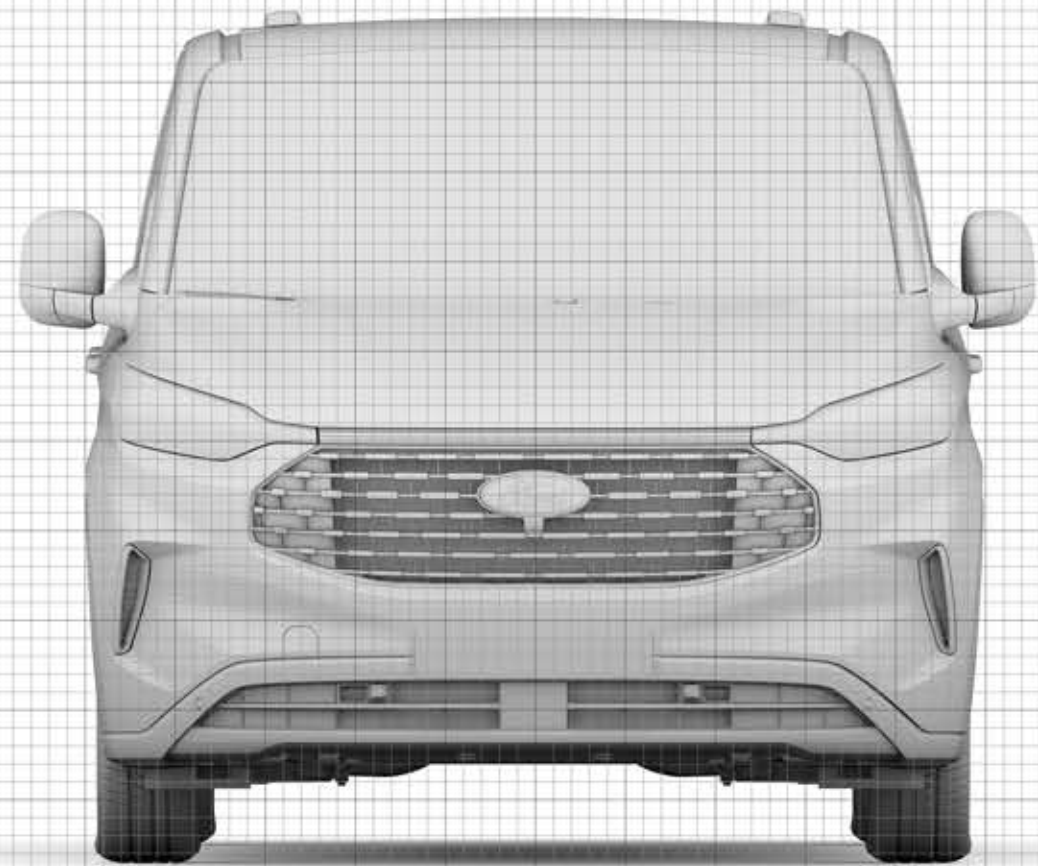

V710 Tourneo Custom L1 H1 - LHD Front Profile

 =200mm